

3-1. Using the touch screen

Touch screen

By touching the screen with your finger, you can control the audio system and air conditioning system, and adjust the screen display etc.

Press **SETUP** or **INFO PHONE** to display the following screen.

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

The illustrations below are for vehicles with navigation system.

The display and button positions will differ depending on the type of the system.

■ Display

▶ "Setup" screen



► “Information” screen



■ Reference

► Display buttons

Button	Page
“CLIMATE”	P. 246
“AUDIO”	P. 257
“MAP VOICE”/“DEST”	Navigation System Owner’s Manual
“INFO PHONE” (Displaying the “Information” screen)	P. 228
“DISP” (Adjusting the display)	P. 232
“SETUP” (Displaying the “Setup” screen)	P. 235

3-1. Using the touch screen

► “Setup” screen

Switch	Page
“General”	P. 235
“Clock”	P. 239/ Navigation System Owner’s Manual
“Voice”	P. 240/ Navigation System Owner’s Manual
“Navi.”	Navigation System Owner’s Manual
“Phone”	P. 332
“Audio”	P. 257
“Vehicle”	P. 245/ Navigation System Owner’s Manual
“Other”	Navigation System Owner’s Manual

► “Information” screen

 
Switch	Page
“Phone”	P. 332
“Fuel Consumption”	P. 234
“Map Data”, “Calendar”, “LEXUS Insider”, “XM Sports”, “XM Stocks”, “XM NavWeather”	Navigation System Owner’s Manual

Initial screen



If the “ENGINE START STOP” switch is turned to ACCESSORY or IGNITION ON mode, the initial screen will be displayed for a few seconds as the system starts up.

Subscribers will be shown the “LEXUS ENFORM” screen next.

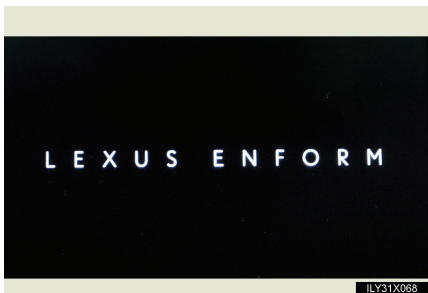


3-1. Using the touch screen

Adjusting the display

STEP 1 Press .

STEP 2 Adjust the display as desired using “-” / “+” / “R” / “G”.

 If you do not touch the screen for 20 seconds, the system will return to the previous screen.

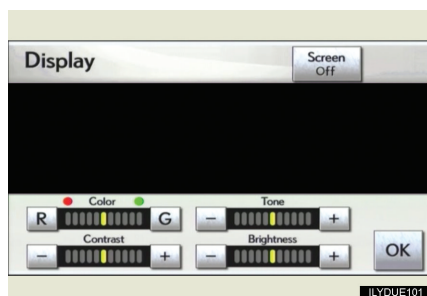

	“R”	“G”
“Color”*	Red	Green
	“-”	“+”
“Tone”*	Lighter	Darker
“Contrast”	Lower	Higher
“Brightness”	Darker	Brighter

*: Vehicles with DVD player only, displays during DVD video/audio or video CD playback

■ To avoid damaging the touch screen

- Touch the screen lightly with your finger. If there is no response, remove your finger from the screen and try again.
- Remove any dirt on the screen by wiping with a soft cloth. Do not use detergent.

■ When using the touch screen

- If the screen is cold, the display may be dark, or the system may seem to be operating slightly slower than normal.
- The screen may seem dark and hard to see when viewed through sunglasses. Change your angle of viewing, adjust the display on the "Display" screen or remove your sunglasses.

■ Changing between day mode and night mode



When the headlights are turned on, the screen dims.

However, the screen can be switched to day mode by touching "Day Mode".

The screen will stay in day mode when the headlights are turned on until "Day Mode" is touched again.

The switch will not be displayed if the instrument panel light control is set to the brightest level.

■ To turn off the display

If "Screen Off" is touched, the screen display is turned off, and guidance is by voice only.

3-1. Using the touch screen

 
Fuel consumption

■ Consumption

STEP 1 Press .

STEP 2 Touch "Fuel Consumption" on the "Information" screen.

If the "Consumption" screen does not appear, touch "Consumption".

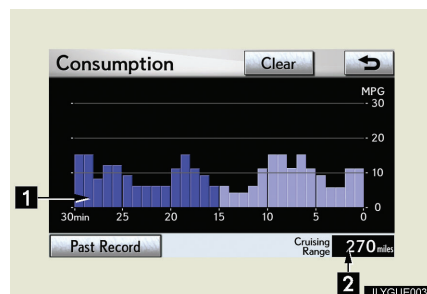

1 Fuel consumption in the past 30 minutes

 
2 Cruising range

■ Past record (with navigation system)

STEP 1 Press .

STEP 2 Touch "Fuel Consumption" on the "Information" screen.

If the "Past Record" screen does not appear, touch "Past Record".

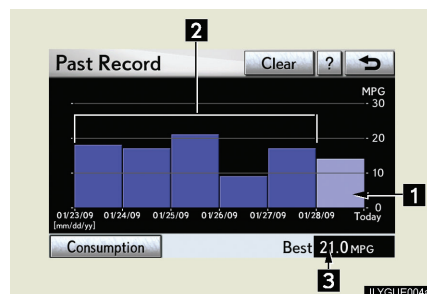

1 Average fuel consumption (today)

2 Average fuel consumption (past 5 days)

3 Best past fuel consumption

■ Resetting the data

Selecting "Clear" on the "Consumption" screen will reset the consumption data.
Selecting "Clear" on the "Past Record" screen will reset the past record data.

3-1. Using the touch screen

Setting the touch screen

 
You can change the touch screen to your desired settings.

General settings

This screen is used for language selection, and for setting operation sounds, automatic screen change to on or off, etc.


Touch "General" on the "Setup" screen.

► Page 1

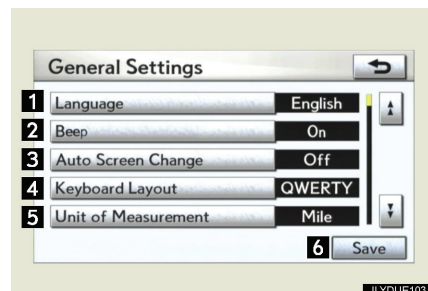

- 1 Select language
- 2 Beep on/off
- 3 Automatic transition on/off (with navigation system)
- 4 Select keyboard layout
- 5 Select the unit
- 6 Save settings

 ► Page 2

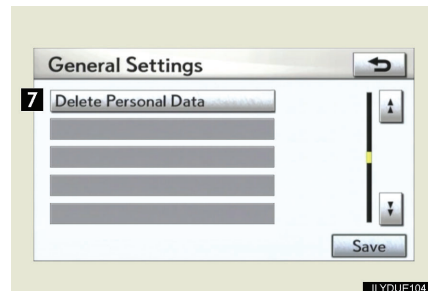

- 7 Delete personal data

 
Make sure to save after changing settings.

3

Interior features

3-1. Using the touch screen

■ Select language

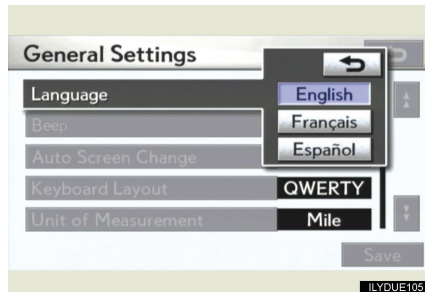

Select the desired language.

■ Change voice recognition language

The desired voice recognition language can be selected from the list.

 
■ Automatic transition on/off

After 20 seconds of air conditioning or audio system use, the system will return the display to the previous screen.


■ **Select keyboard layout**

The keyboard layout can be changed.

► “ABC” type

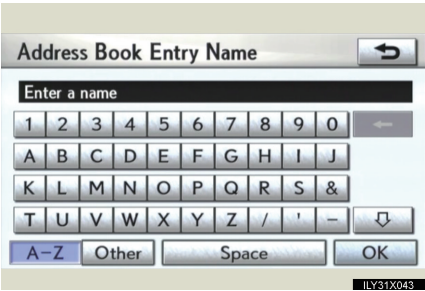

► “QWERTY” type

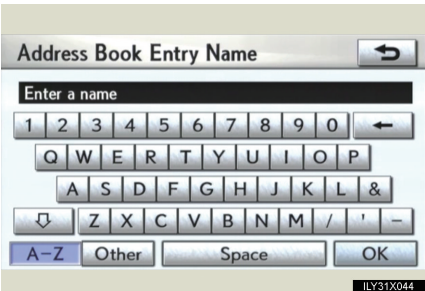 


■ **Select the unit**

The measurement unit shown on the display can be changed.

3-1. Using the touch screen

■ Delete personal data

 STEP 1 Touch “Delete Personal Data” on the “General Settings” screen.

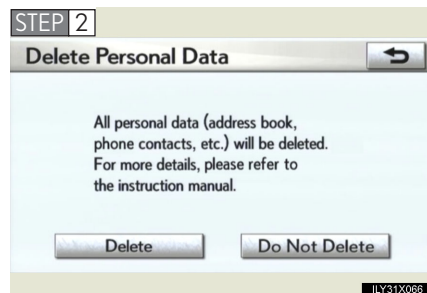

Touch “Delete”.

Check carefully beforehand, as data cannot be retrieved once deleted.

STEP 3 A confirmation screen will be displayed. Touch “Yes”.

 
The following personal data can be deleted or turned to their default settings:

- Radio preset stations
- Phonebook data
- Call history data
- Speed dial data
- Voice tag data
- Bluetooth® phone data
- Volume setting
- Details setting
- Maintenance conditions*
- Maintenance information “off” setting*
- Address book*
- Areas to avoid*
- Previous points*
- Route guidance*
- Route trace*

*: If the navigation system is equipped

Clock settings

Touch "Clock" on the "Setup" screen.

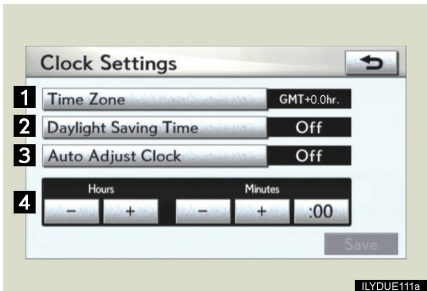

- 1 Select time zone
(with navigation system)
- 2 Daylight saving time on/off
- 3 Auto adjust clock on/off
(with navigation system)
- 4 Manual clock setting

Manual adjustment

 
The minutes and hours can be adjusted manually when auto adjust clock is set to off.

3-1. Using the touch screen


Voice settings

Touch "Voice" on the "Setup" screen.

► Page 1

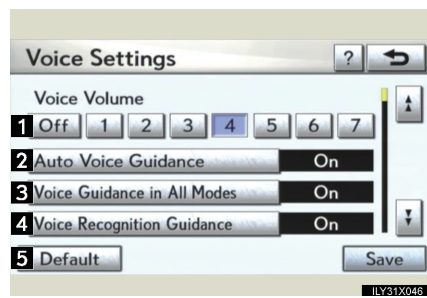


► Page 2

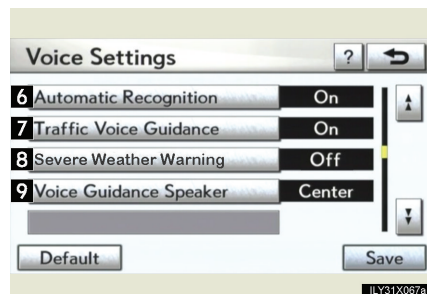 

- 1 Select voice guidance volume
- 2 Voice guidance on/off during route guidance (with navigation system)
- 3 Voice guidance on/off during audio system etc. is in use (with navigation system)
- 4 Voice recognition talkback on/off
- 5 Restore default settings
- 6 Automatic recognition on/off without pressing the talk switch more than once
- 7 Voice guidance on/off when using the traffic information (with navigation system)
- 8 Voice guidance on/off when using the XM[®] NavWeather (with navigation system)
- 9 Select voice guidance projection

Audio settings

 Touch “Audio” on the “Setup” screen.

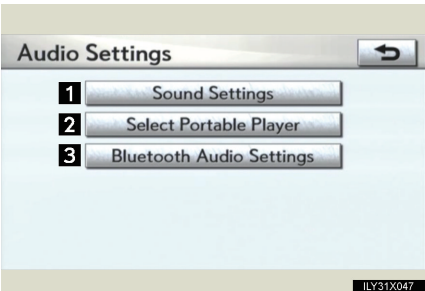

- 1 Sound settings
- 2 Select portable player
- 3 Setting up Bluetooth® audio

 
■ **Sound settings**

Touch “Sound Settings”.

Sound/DSP settings can be changed. (→P. 326)

■ **Select portable player**

STEP 1 Touch “Select Portable Player”.

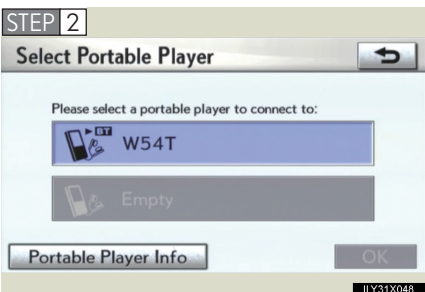


A portable player can be selected for connection.

Where no player is registered, “Empty” is displayed.

When “Portable Player Info” is touched, the following screen is displayed:

 3-1. Using the touch screen

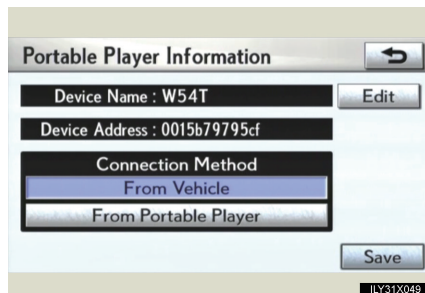


“Device Name” and “Connection Method” can be changed.

- Changing the device name

STEP 1 Touch “Edit”.

STEP 2 Enter the desired name.

 - Changing the connection method

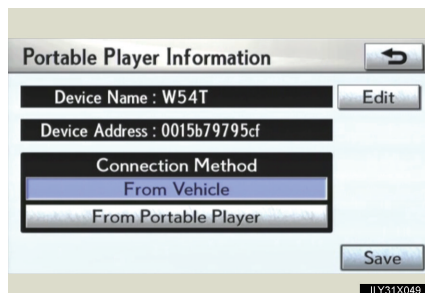


Touch “From Vehicle” or “From Portable Player”.

“From Vehicle”: Connect the audio system to the audio player.

“From Portable Player”: Connect the audio player to the audio system.

■ Setting up Bluetooth® audio

 Touch "Bluetooth* Audio Settings".

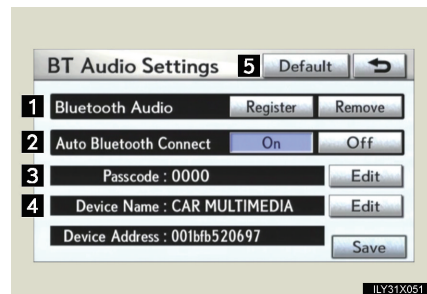

- 1 Register/remove Bluetooth® audio
- 2 Automatic connection on/off
- 3 Display passcode
- 4 Display device name
- 5 Restore default settings

*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.

● Registering Bluetooth® audio

STEP 1 Touch "Register".



 
Enter the passcode into the portable player.

A message is shown if connection has been successful.

If connection fails, a message will be displayed and connection will be re-attempted.

● Removing Bluetooth® audio

STEP 1 Touch "Remove".

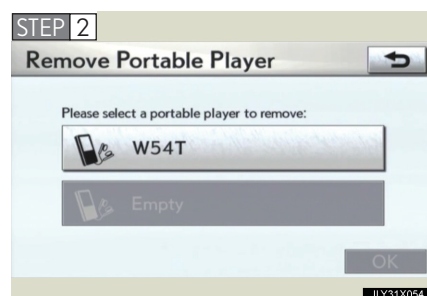

Touch the player to remove.

A confirmation screen will be displayed, touch "Yes" to remove the player.

3-1. Using the touch screen

● Changing the passcode

STEP 1 Touch “Edit”.

STEP 2 Enter the desired passcode.

The passcode can be between 4 and 8 characters in length, and is set to “0000” by default.

● Changing the device name

STEP 1 Touch “Edit”.

STEP 2 Enter the desired name.

● Restoring the default settings

STEP 1 Touch “Default”.

STEP 2 A confirmation screen will be displayed, touch “Yes” to restore the default settings.

■ When setting the connection method to “From Portable Player”

- Connection methods differ depending on the audio player. Consult your audio player’s manual.
- Automatic connection cannot be set to “On”.

 
■ When using Bluetooth® audio

A confirmation screen will be displayed if an attempt is made to remove a portable player.

Touch “Yes” to disconnect and remove the player.


Vehicle settings

Touch "Vehicle" on the "Setup" screen.

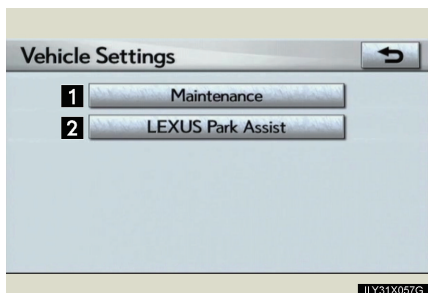

- 1 Refer to "Navigation System Owner's Manual".
- 2 Setting up intuitive parking assist

 ● Setting up intuitive parking assist

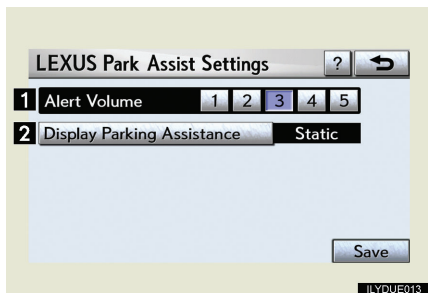

- 1 Alert volume setting
- 2 Display setting
 - "Static": Displays when the sensors detect an obstacle.
 - "Dynamic": Displays if maneuvers are required to avoid an obstacle.
 - "Off": Does not display the intuitive parking assist display.

3

Interior features

■ Intuitive parking assist display

When an obstacle is detected while the rear view monitor system is in use, the warning indicator will appear in the top right of the screen even if the display setting has been set to "Off".